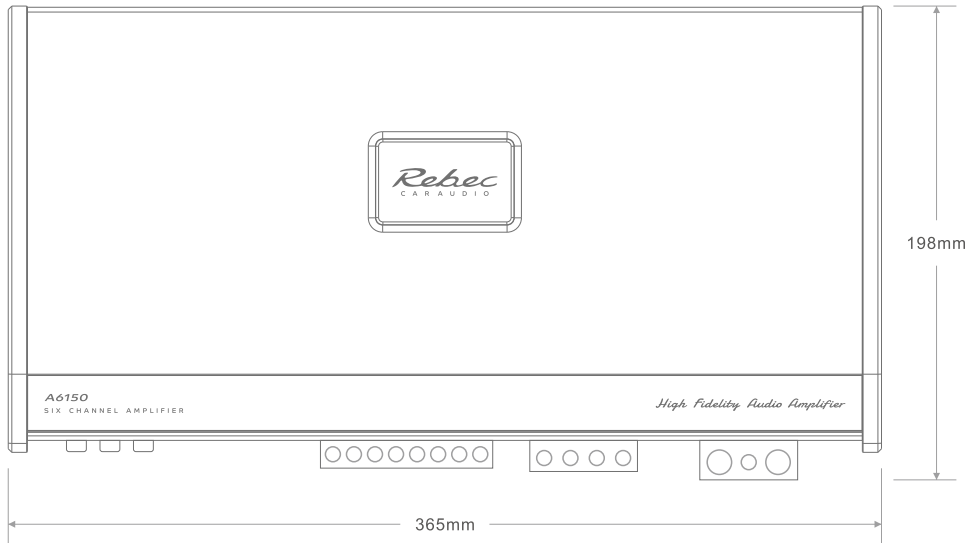


① Low Level Input for CH1-CH6

② Volume Adjustment Knobs for CH1&CH2

③ Volume Adjustment Knobs for CH3&CH4

④ Volume Adjustment Knobs for CH5&CH6

⑤ High Level Output for CH1-CH4

⑥ High Level Output for CH5-CH6, CH5&CH6 can be bridged for output


⑦ Power Terminal: Positive Input Terminal 、 Start Control Terminal 、 Ground Wire Terminal

⑧ Indicator Light: {
Blue Light: In normal operation
Red Light: Abnormal working state

Dimensions & Terminals

INSTALLATION TIP:

- It is forbidden to dismantle and change the product by oneself. disassembly and modification of the product may cause accidents, fire or electric shock.
- This product is recommended for use in automotive environments with a DC voltage range of 12-14.4 v beyond which failure may occur.
- Before wiring, be sure to disconnect the cable from the Power Terminal First, other-wise it is easy to cause short circuit and cause fire.
- Do not use the screws and nuts in the brake system when installing and grounding cables. This will cause the brake system to fail and cause an accident.
- Protect the cable from damage caused by pulling, cutting and short-circuiting.

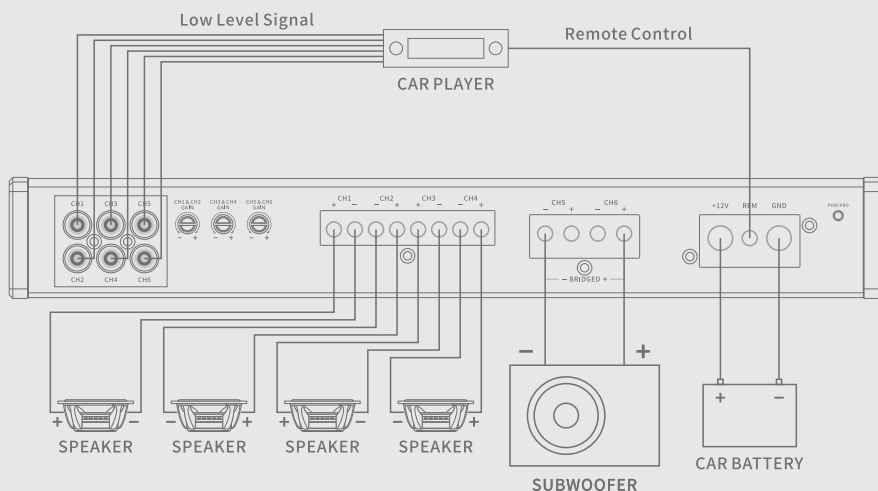

Connection Indicator Diagram

Output Power(RMS)	4 × 100W@4Ω(CH1-4)	Distortion (THD)	<0.08%
	2 × 150W@4Ω(CH5-6)	Input Sensitivity	0.3V
Amplifier Type	Class AB	Input Resistance	30Kohms
Frequency Response	20Hz-35KHz	Operating Voltage	10-16V
Signal To Noise Ratio	>97dB(A-weighted)	Dimension	365 × 198 × 51mm